

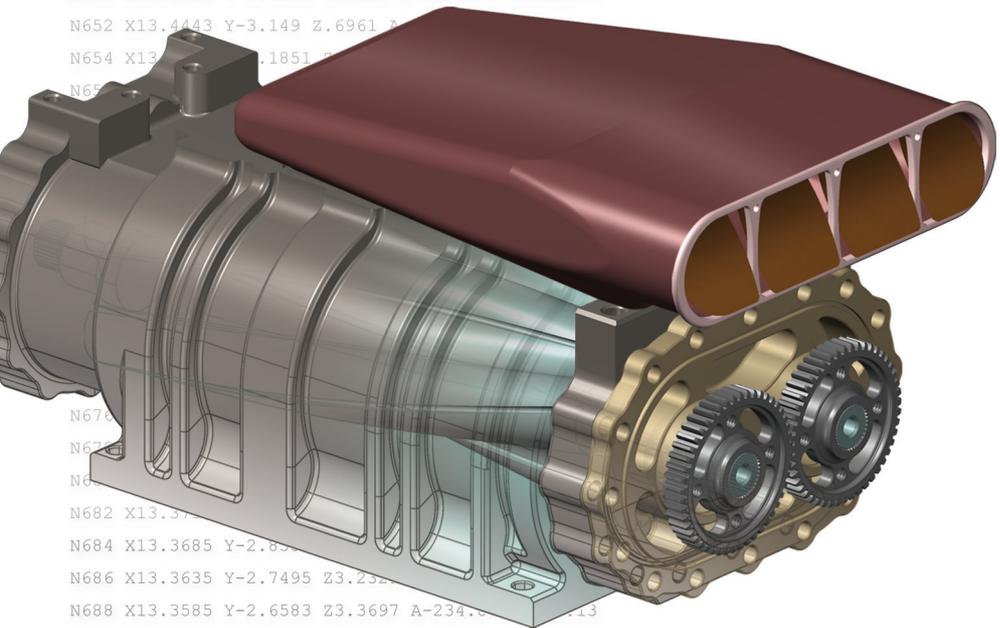


Mastercam X⁶

Welcome to Mastercam

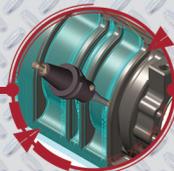

When Second Best Won't Cut It.

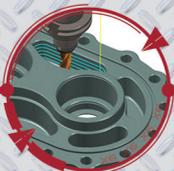

mastercam x getting started tutorials

Mastercam X6

Welcome to

Mastercam

December 2011

Be sure you have the latest information!

Information might have been changed or added since this document was published. Contact your local Reseller for the latest information.



Mastercam® X6 Welcome to Mastercam

Date: December 2011

Copyright © 2011 CNC Software, Inc.— All rights reserved.

First Printing: December 2011

Software: Mastercam X6

TERMS OF USE

Use of this document is subject to the Mastercam End User License Agreement.

A copy of the Mastercam End User License Agreement is included with the Mastercam product package of which this document is part. The Mastercam End User License Agreement can also be found at:

www.mastercam.com/legal/licenseagreement/

Contents


.....

Introduction	1
▶ Tutorial Goals.....	1
General Tutorial Requirements.....	2
1. The Mastercam Workspace	5
▶ Lesson Goals	5
▶ Interface Overview.....	5
▶ Exercise 1: Exploring the Interface.....	8
▶ Exercise 2: Undock, Move, and Redock a Toolbar	9
▶ Exercise 3: Hiding and Displaying a Toolbar.....	10
▶ Exercise 4: Working with the Operations Manager	12
2. System Configuration	15
▶ Lesson Goals	15
▶ The System Configuration Dialog Box	15
▶ Exercise 1: Changing Settings	16
Create a new configuration file	16
Change the graphics background color	17
Change the calculable field color	19
Hide viewport XYZ axes and display large icons	19
Revert to the default configuration file	21
▶ Exercise 2: Converting Units	21
Open a part with English units	21
Convert a part back to metric units	22

3. Customizing the Interface	25
▶ Lesson Goals	25
▶ The Customize Dialog Box	25
▶ Exercise 1: Customizing the Right-Click Menu	26
Add a function to the right mouse button menu	26
Format the right mouse button menu	28
Conclusion	29
▶ Mastercam Resources	30
▶ Mastercam Documentation	31
Contact Us.....	31

INTRODUCTION

Welcome to Mastercam! Mastercam is a powerful application that delivers CAD/CAM software tools for all types of programming, from the most basic to the extremely complex. This tutorial introduces you to the Mastercam workspace and prepares you for work with other tutorials in the *Mastercam Getting Started Tutorial Series*.

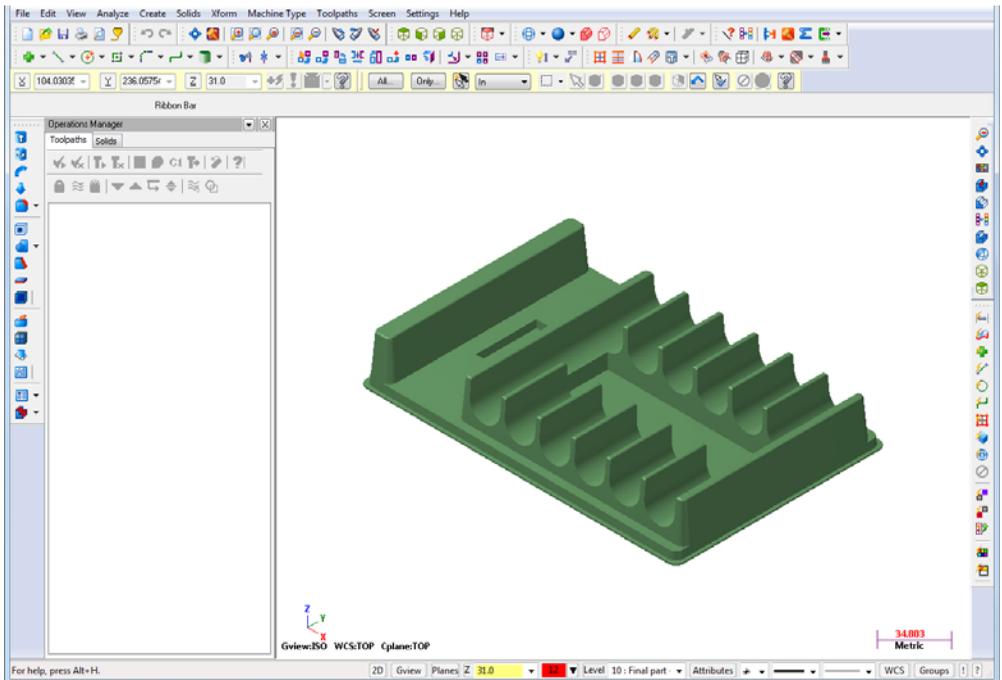

Tutorial Goals

- Become familiar with the Mastercam workspace.
- Personalize your workspace to suit your requirements and preferences.



IMPORTANT: Screen colors in the tutorial pictures were modified to enhance image quality; they may not match your Mastercam settings or the tutorial results. These color differences do not affect the lesson or the exercise results.

General Tutorial Requirements

All Mastercam tutorials have the following general requirements:

- You must be comfortable using the Windows® operating system.
- The tutorials cannot be used with Mastercam Demo/Home Learning Edition (HLE). The Demo/HLE file format (EMCX-6) is different from Mastercam (MCX-6), and basic Mastercam functions, such as file conversions and posting, are unavailable.
- Each lesson in the tutorial builds on the mastery of preceding lesson's skills. We recommend that you complete them in order.
- *Focus Series* and *Exploring Series* tutorials require, at minimum, a mastery of the basic Mastercam skills taught in the *Getting Started Series* modules. A general knowledge of machining principals and practices is also required.
- You must have a seat of Mastercam X6 Design or higher to complete most of the tutorials in the *Getting Started Series*.
- The *Basic 2D Machining* module in the *Getting Started Series* requires, at minimum, a seat of Mill Entry or Router Entry.
- The *Basic 3D Machining* module in the *Getting Started Series* requires Mill Level 3 or Router Pro.
- Additional files may accompany a tutorial. Unless the tutorial provides specific instructions on where to place these files, store them in a folder that can be accessed from the Mastercam workstation, either with the tutorial or in any location that you prefer.
- The *Getting Started Series* tutorials are available in an Adobe® Flash® compatible video format. Additional tutorial videos may also be available. Contact your local Mastercam Reseller for more information.
- You must install Adobe Flash Player to display tutorial videos. You can download Adobe Flash Player from www.adobe.com.

- All Mastercam tutorials require you to configure Mastercam to work in a default metric or English configuration. The tutorial provides instructions for loading the appropriate configuration file.

4 • TUTORIAL GOALS

The Mastercam Workspace

Mastercam's workspace consists of a set of standard elements, including toolbars, a status bar, and a work area. It also features special elements, such as *ribbon bars* and the *Operations Manager*.

Lesson Goals

- Learn about the Mastercam environment.
- Modify toolbars and the Operations Manager.

Interface Overview


- Start Mastercam using your preferred method. Refer to the following pictures as you look at the Mastercam interface on your screen.

6 • INTERFACE OVERVIEW

Title bar

Menu bar

Horizontally docked toolbars

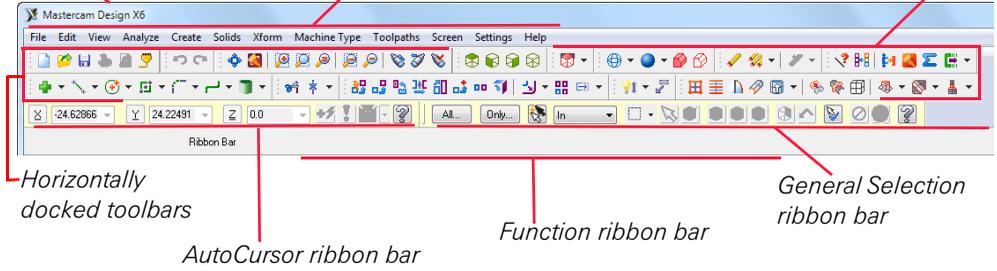


Horizontally docked toolbars

General Selection ribbon bar

AutoCursor ribbon bar

Function ribbon bar


Most recently used (MRU) toolbar

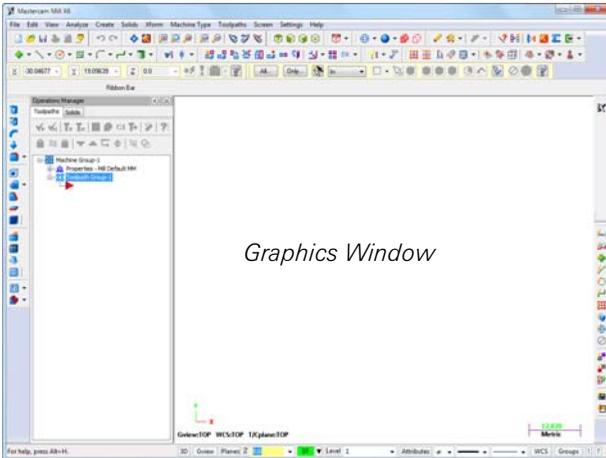

Graphics Window

Vertically docked toolbar

Vertically docked toolbar

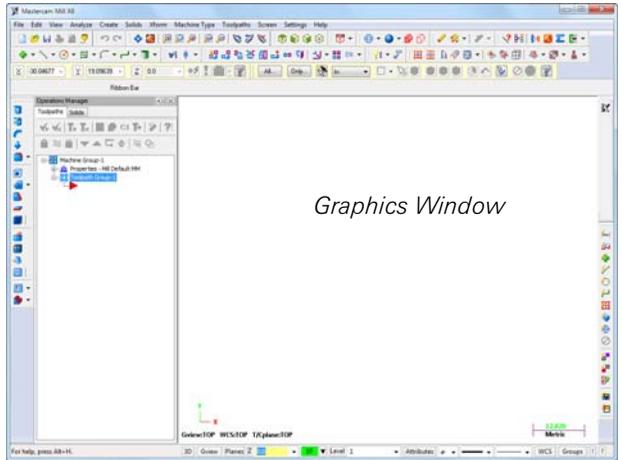

Prompt area

Status bar

Exercise 1: Exploring the Interface

In this exercise, you explore Mastercam's interface.



- 1 Right-click in the graphics window.

The right-click menu provides quick access to many common functions.



TIP: To learn more about customizing the right-click menu, see **Customizing the Right-Click Menu** on page 26.

- 2 Move your mouse over some of the icons in the toolbars. Note the tooltips.

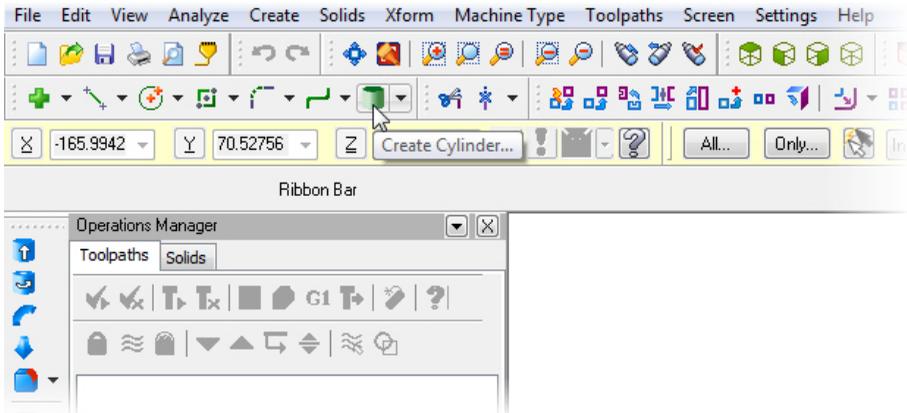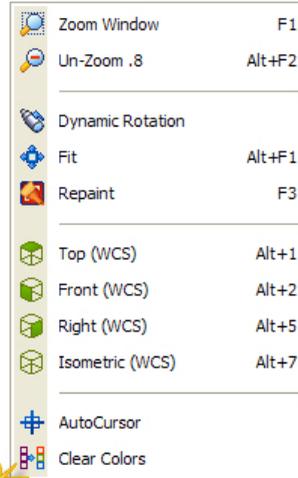

- 3 Move your mouse over the different functions in the Status bar at the bottom of the screen.

This icon displays when you hover over some of the Status bar options and indicates that right-clicking on the function gives you additional options.




Click the **Help** button on the Status bar, or press **[Alt+H]** to learn more.



Exercise 2: Undock, Move, and Redock a Toolbar


With Mastercam, you can arrange your toolbars according to your particular needs. In this exercise, you practice this with the Trim/Break toolbar.

- 1 Select the **Trim/Break** toolbar by left-clicking and holding the separator bar. Do not release the mouse button.

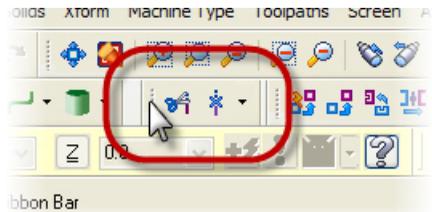

- 2 Drag and drop the toolbar onto the graphics window.

The toolbar is now “floating” in the graphics window. You can move floating toolbars anywhere in the graphics window.

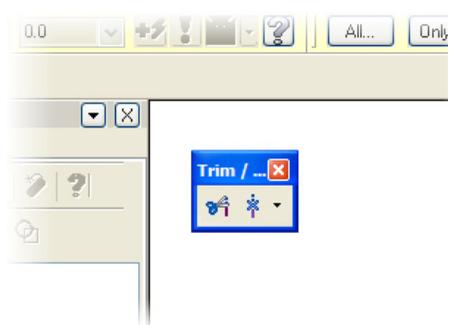


TIP: You can also create a floating toolbar by double-clicking its separator bar.

- 3 Drag and drop the **Trim/Break** toolbar onto the left side of the graphics window.

The toolbar snaps vertically into place.

- 4 Return the **Trim/Break** toolbar to another location on the main toolbar using the drag and drop method.

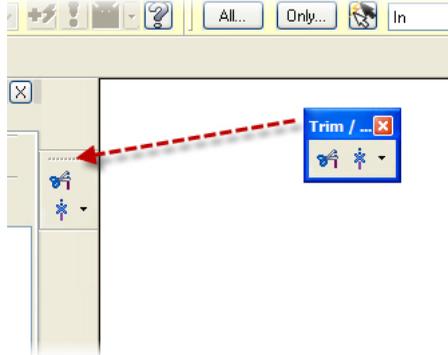

Exercise 3: Hiding and Displaying a Toolbar

Mastercam's toolbars make accessing functions as easy as a mouse click. However, you may find that you do not use some toolbars or that a toolbar that you need is not displayed. In this exercise, you use the right-click menu to hide and display the Trim/Break toolbar.


- 1 Right-click in an empty toolbar area to display a menu that shows a list of available toolbars.

Toolbars that are listed with check marks are visible.

- 2 Choose **Trim/Break** to deselect the check mark.

Deselecting the check mark hides the toolbar.

- 3 Repeat Steps 1 – 2 to re-display the Trim/Break toolbar.

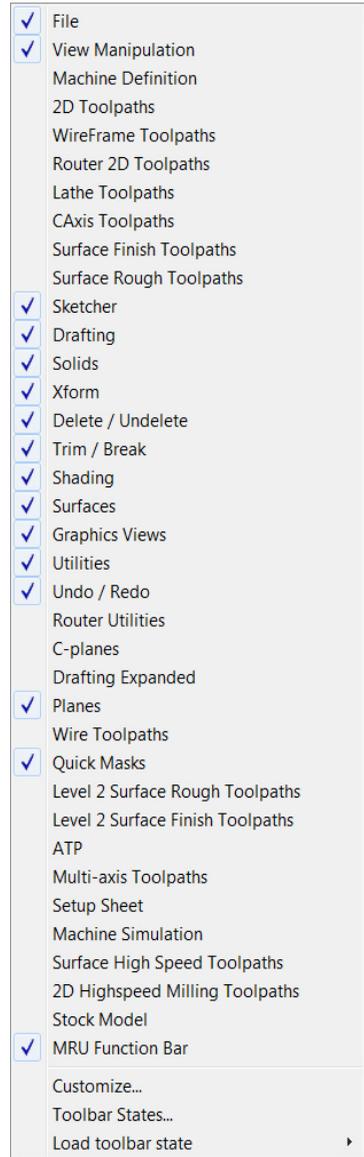


Exercise 4: Working with the Operations Manager

Like toolbars, you can toggle the display of the Operations Manager, as well as move it to a new location. Operations Manager settings are *modal*, which means that Mastercam remembers the settings even after you close the application.

In this exercise, you use different methods to move, hide, and display the Operations Manager.


- 1 Drag and drop the Operations Manager into the graphics window by left-clicking and dragging it by its title bar.

Like an undocked toolbar, the Operations Manager can freely move (float) anywhere within the graphics window. You can also place it on top of the toolbars or dock it on a second monitor.

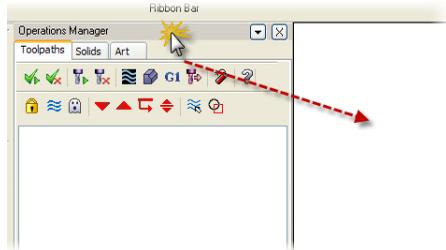


TIP: You can also double-click the Operations Manager's title bar to undock or redock it.

- 2 Resize the Operations Manager by clicking and dragging any of its edges.
- 3 Drag and drop the Operations Manager onto the right side of the screen.

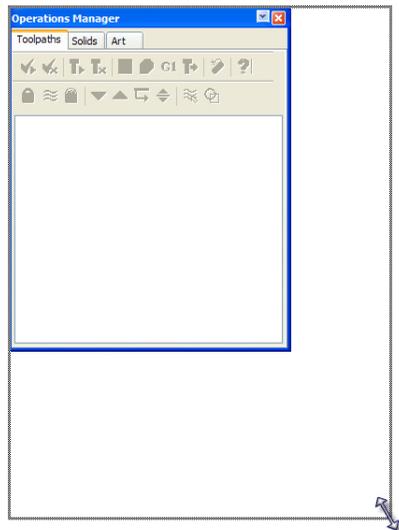


The Operations Manager snaps into place as it docks.

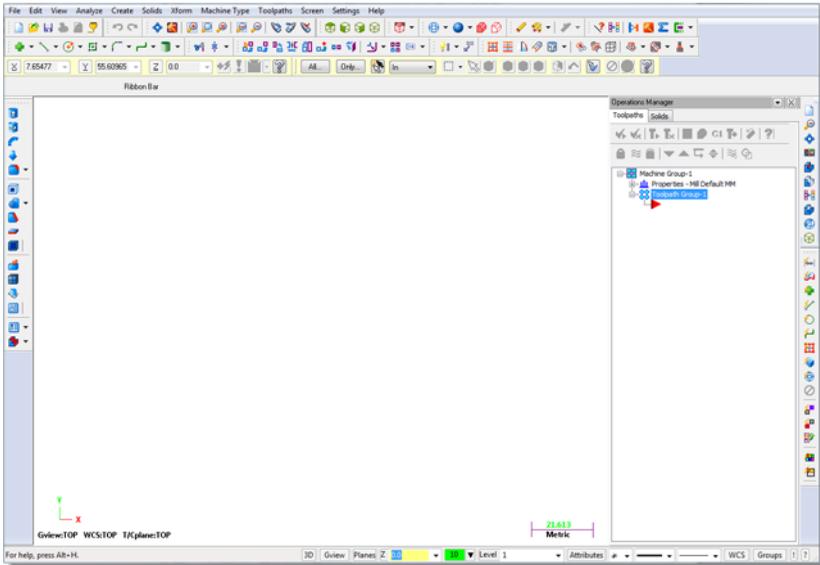


TIP: If you work with two monitors, drag and drop the Operations Manager onto the monitor that is not running Mastercam to free the entire graphics window for drawing.

- 4 Hide the Operations Manager by clicking the **Close** button in its upper right corner.

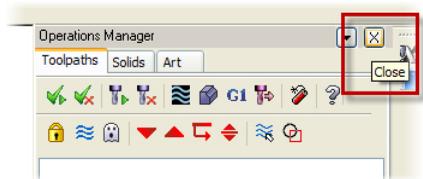

- 5 Re-display the Operations Manager by choosing **View, Toggle Operations Manager**.

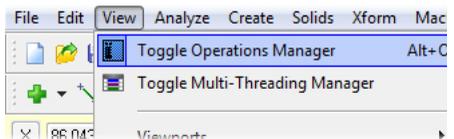

TIP: You can also use the keyboard shortcut [Alt+O] to toggle the display of the Operations Manager.

LESSON 2


System Configuration

With Mastercam, you can change your workspace environment or create a new one at anytime. Because each workspace configuration is saved to a separate file, it's easy to switch from one environment to another. Use the System Configuration dialog box to define and manage the configuration files that store these settings.

Lesson Goals

- Create a configuration file.
- Make some sample changes to your configuration settings.
- Open an inch part while working in a metric environment.
- Convert an MCX part from inch to metric.

The System Configuration Dialog Box

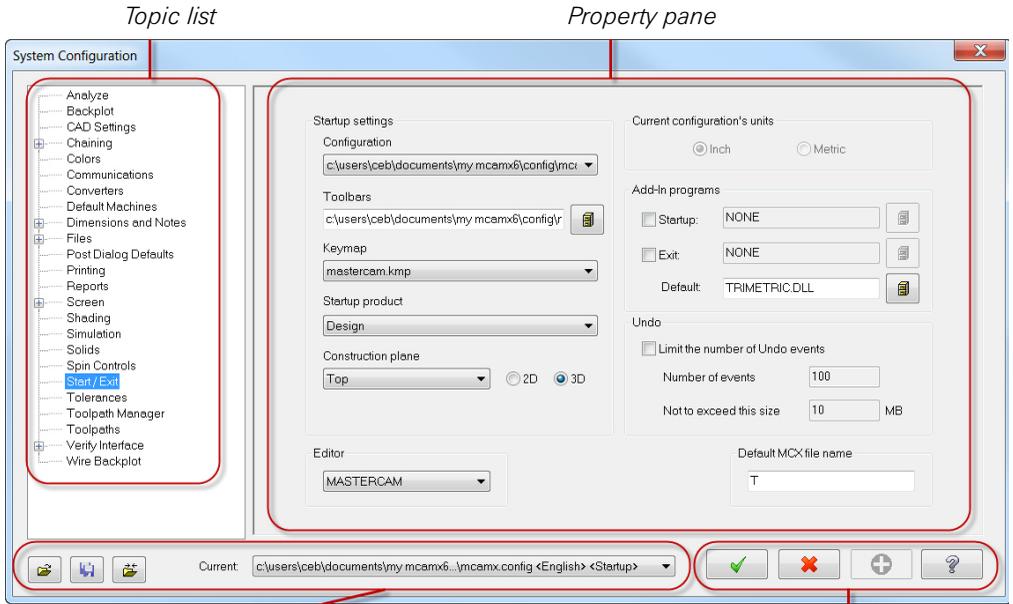


File management functions

OK, Cancel, Apply, and Help buttons

Exercise 1: Changing Settings

In this exercise, you make changes to some of your Mastercam settings using the System Configuration dialog box.


- Choose **Settings, Configuration** from the menu bar to open the System Configuration dialog box.

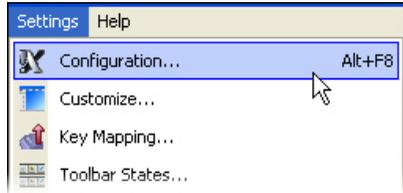

TIP: You can also press [Alt+F8] to open this dialog box.

► Create a new configuration file


- Click the **Save As** button.
- Change the configuration name to “YourInitials”_Tutorial_Lesson2 and click **OK**.

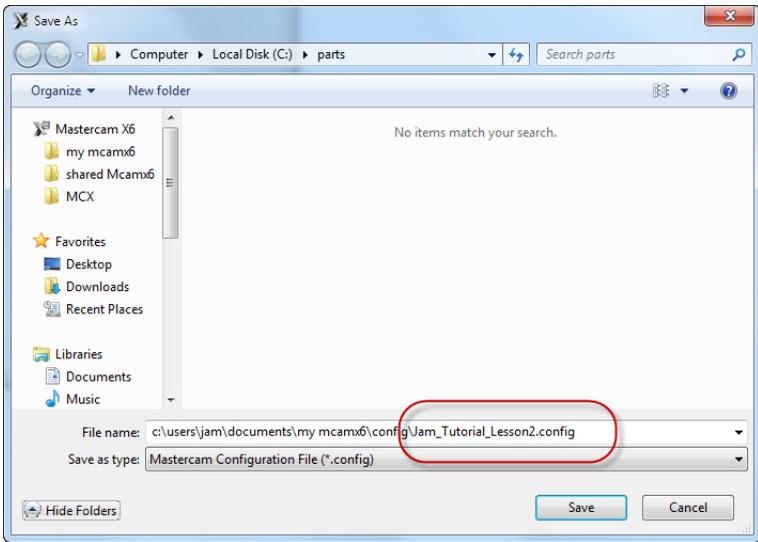

Mastercam saves a new file to the \config folder in your Mastercam installation, and the new file becomes the current configuration file. Any changes you make during this session are applied to this configuration file.

► Change the graphics background color


- 1 From the list of configuration topics on the dialog's left side, select **Colors**.

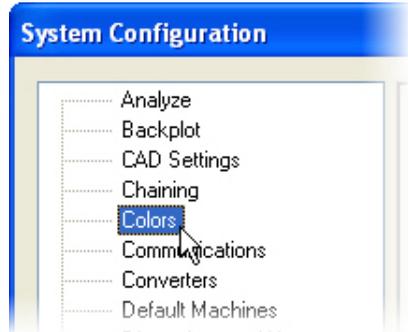


- 2 Select **Graphics background color** from the list of interface items in the property pane.

The Graphics background color is the color that displays in the graphics window.

The default color is 252.

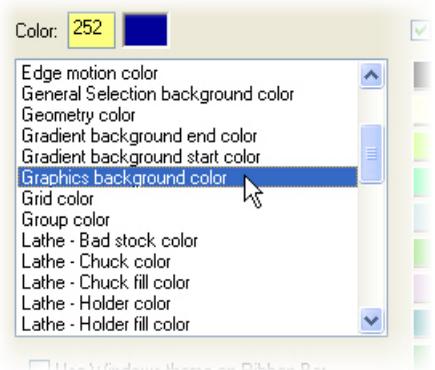


- 3 Type **15** into the **Color** field and press **[Tab]** or **[Enter]**.

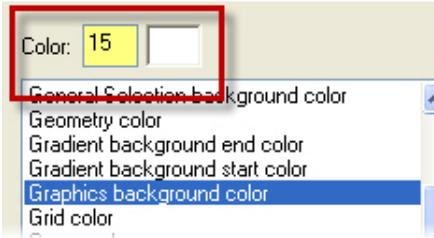

TIP: Change colors either by typing a number from 0 to 255 in the text box, or by clicking a color in the color palette.


When you change a setting in the property pane, a check mark displays in front of the configuration topic's name so that you can track the changes you make during an editing session.

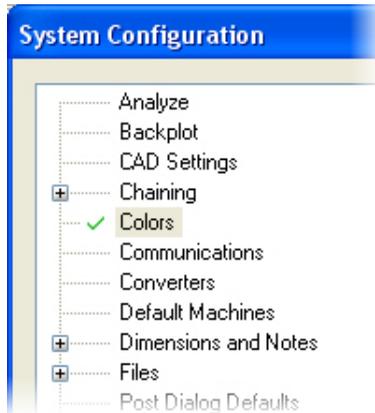

- 4 Click the **Apply** button to apply your changes to the configuration file.
- 5 Click **Yes** to save the changes to your configuration file.



The background color changes in the graphics window.

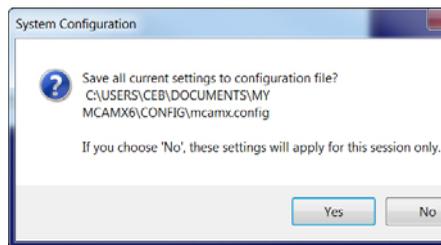


► Change the calculable field color


- 1 Select **Calculable Field Color** from the list of interface items.

This setting defines the color of the data entry fields that support calculator functions.

The current color is 18.

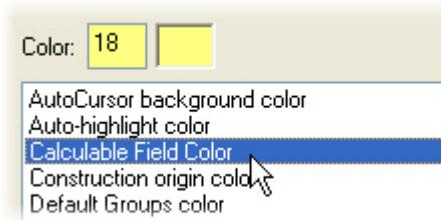

- 2 Click on color **94** (orange) in the color palette.


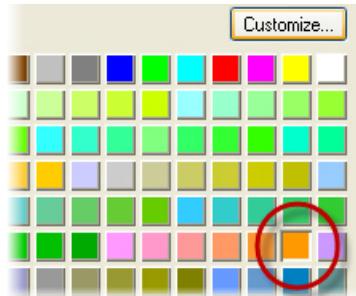


- 3 Click **Apply**.



- 4 Click **Yes** to save the changes to your configuration file.

Calculable fields, such as the Z depth function field in the Status bar, change color.

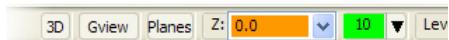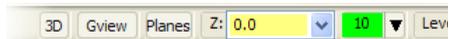


► Hide viewport XYZ axes and display large icons

By default, Mastercam displays information about the geometry (axes, views, planes, and units) at the bottom of the graphics window. You can hide this information by changing the settings in the System Configuration dialog box. From here, you can also increase the size of the icons in the toolbars.




- 1 From the list of configuration topics on the dialog's left side, select **Screen**.

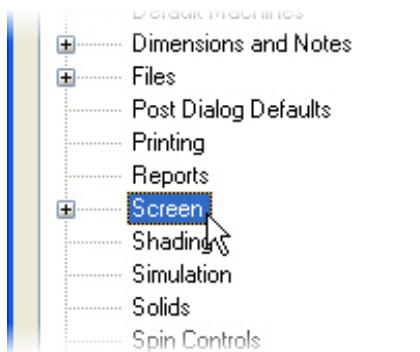

From the property pane:

- 2 Deselect **Display viewport XYZ axes**.
- 3 Select **Large Buttons**.

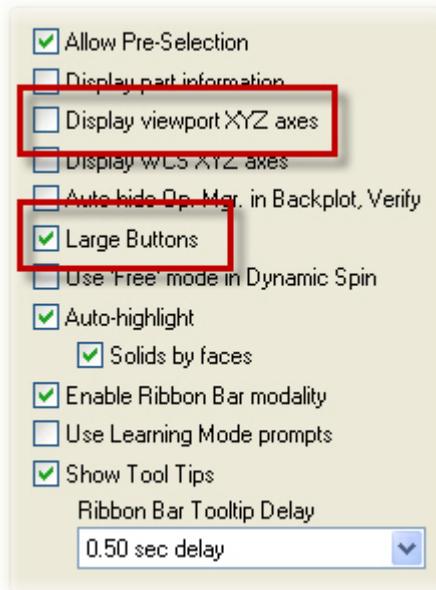

- 4 Click **Apply**.
- 5 Click **Yes** to save the changes to your configuration file.




The viewport information that was displayed at the bottom of the graphics window is now hidden, and the icons in the toolbars are larger.

► Revert to the default configuration file

To go back to the default configuration file, exit and restart Mastercam, or:

- 1 Select `mcamxm.config <Metric>` from the **Current** drop-down menu.
- 2 Click **OK**.

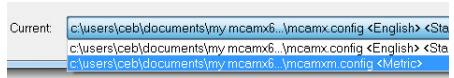


Exercise 2: Converting Units

When you open a part file that uses different units (English or metric) than the current configuration, Mastercam can switch units by loading an alternate default configuration file. Similarly, when you switch to a configuration file that uses different units than the current part, Mastercam can convert and scale the part to the configuration's unit of measurement. In this exercise, you open a part with different units from the current configuration file, and then convert the part back to the original configuration's units.

Before you begin this exercise, restart Mastercam or make sure that `mcamxm.config <Metric>` is your current configuration file.

► Open a part with English units

- 1 Choose **File, Open** from the menu bar.
- 2 Navigate to `BOAT.MCX-6`, which was provided with this tutorial, and click **OK**.

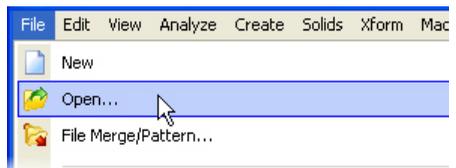


- 3 Click **OK** to switch system units from metric to English.



Mastercam switches the configuration file to `mcamx.config <English>`, and the part opens with English units.

The scale in the graphics window changes from metric to inches.

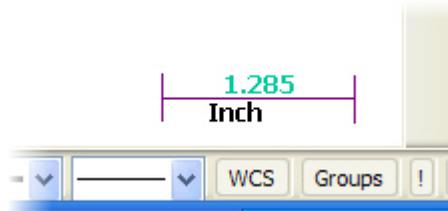

► Convert a part back to metric units

- 1 Press **[Alt+F8]** to open the System Configuration dialog box.


The current configuration file is `mcamx.config <English>`.




- 2 Change the current configuration file back to `mcamxm.config <Metric>`, and click **OK**.




- 3 Click **Yes** to scale the part to metric. Mastercam converts and scales the part.

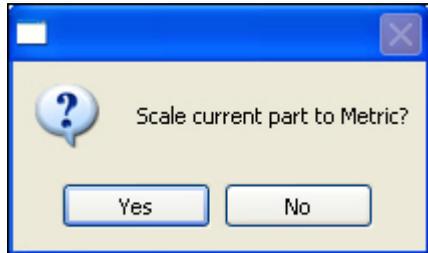

The scale in the graphics window changes from inches back to metric.

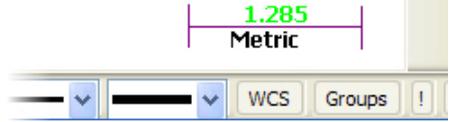


- 4 If necessary, click the **Fit** button to view the entire part in the graphics window.

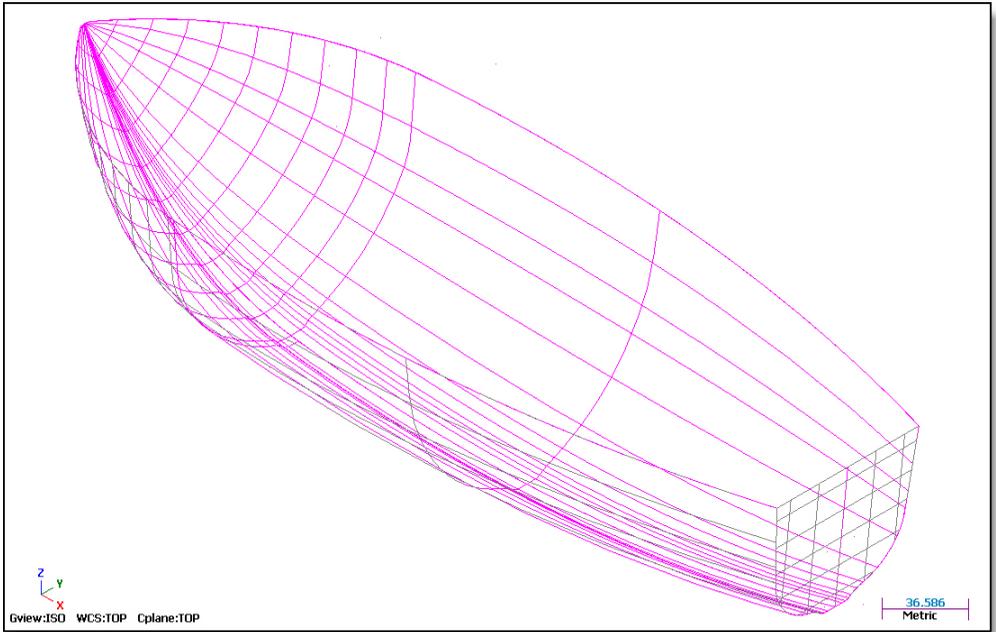

After performing the conversion, Mastercam creates a temporary group from the transformed entities. By default, the color of entities in this “result” group is purple. Click the **Help** button for more information about system groups.

24 • CONVERTING UNITS

- 5 Click the **Clear Colors** button to remove the result color.

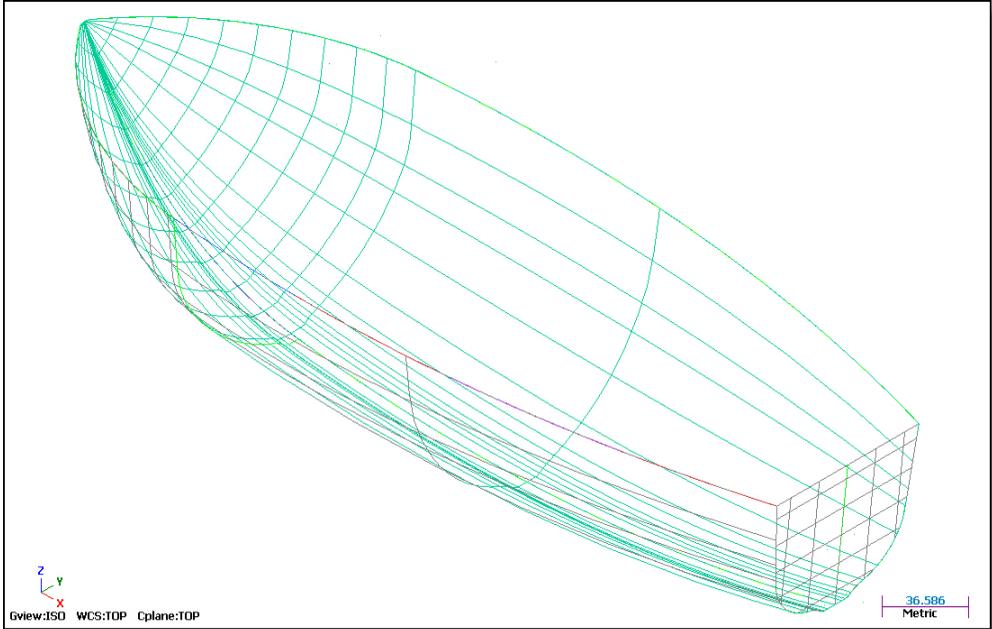

LESSON 3


Customizing the Interface

Use the Customize dialog box to customize toolbar layouts, drop-down menus, and the graphics window right-click menu.

Lesson Goals

- Become familiar with the Customize dialog box.
- Add a shortcut to the right mouse button menu.
- Format the right mouse button menu for easy viewing.

The Customize Dialog Box

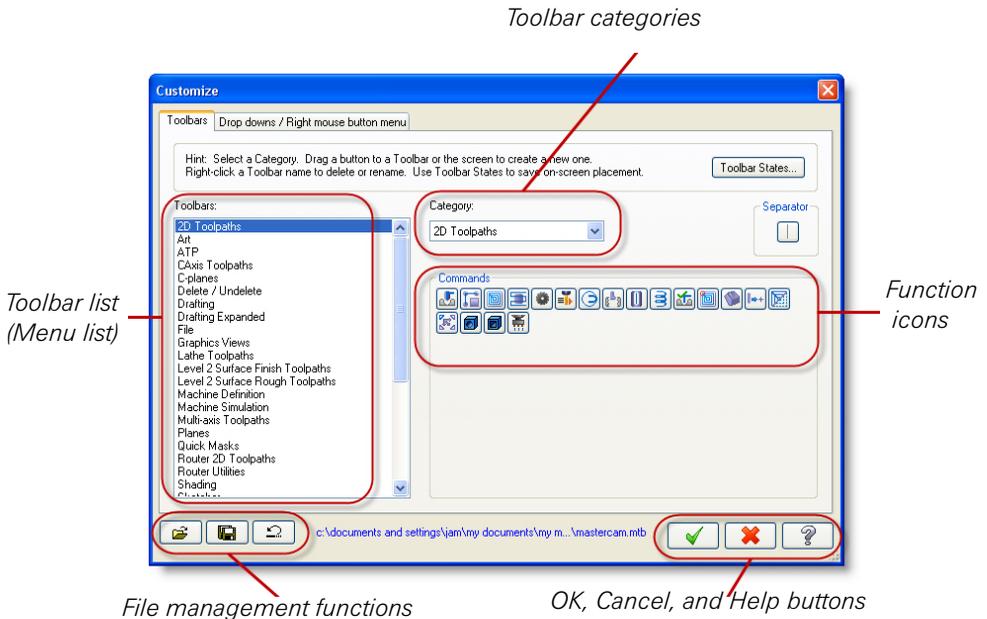


Exercise 1: Customizing the Right-Click Menu

In this exercise, you add a shortcut to Mastercam Help in the graphics window's right-click menu. Because this shortcut accesses a different function from the others that are currently on the menu, you add a separator bar to visually distinguish it.

► Add a function to the right mouse button menu


- 1 Choose **Settings, Customize** from the menu bar to open the Customize dialog box.

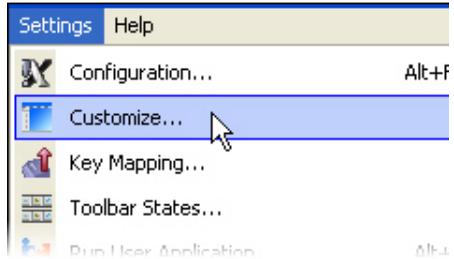


- 2 Click the **Drop downs/Right mouse button menu** tab.



- 3 Select **Help** from the **Category** drop-down menu.

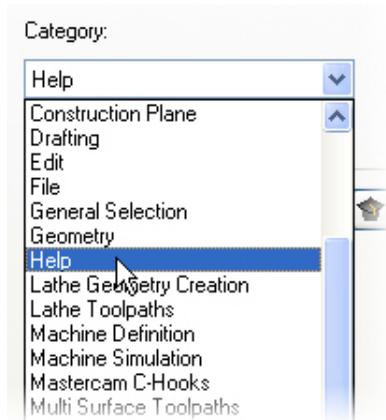


- 4 Drag and drop the **Contents** button from the **Commands** window onto the **Right mouse button menu** item in the **Menus** list.

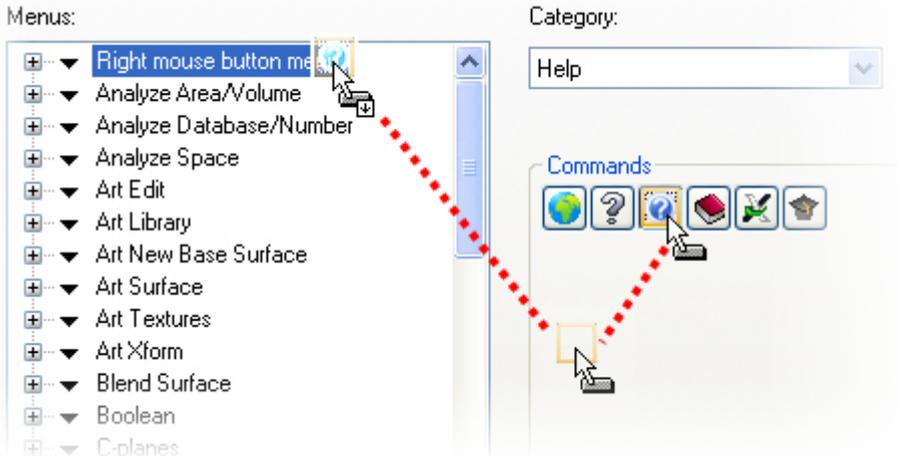

TIP: If the drop-down menu is not expanded, the new function is added as the last function. Otherwise, it is inserted below the selected function on which it is dropped.

► Format the right mouse button menu


- 1 If necessary, expand the **Right mouse button menu** item to view the shortcuts that are currently on the menu.

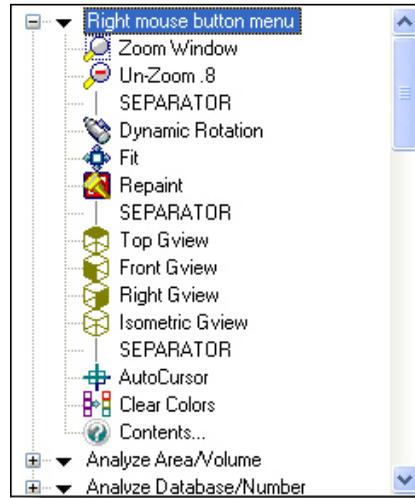

- 2 Drag and drop the **Separator** button onto the **Clear Colors** function.
- 3 A separator is created between the Clear Colors and Contents functions.
- 4 Click **OK** to close the dialog and apply your changes.



- 5 Right-click in the graphics window to check your work.
- 6 The new function displays in the right-click menu.

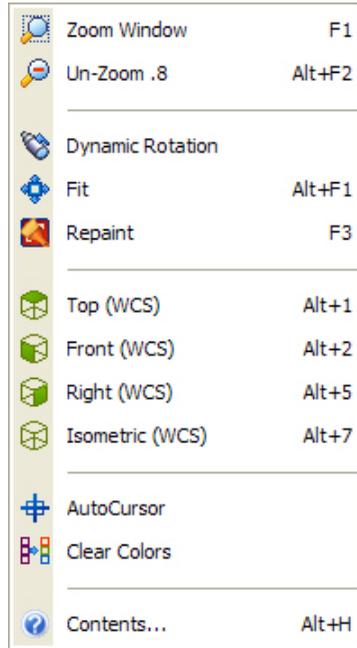

Conclusion

Congratulations! You have completed the *Mastercam X6 Welcome to Mastercam* tutorial. Now that you have mastered the skills in this tutorial, explore Mastercam's other features and functions. Additional tutorials may be available in this or other series.

This is a module of the *Mastercam Getting Started* Tutorial Series. The series introduces general Mastercam functions and teaches basic skills for getting started with Mastercam. Other tutorial series include:

- *Focus Series*: Focuses on a specific Mastercam feature—for example, Setup Sheets or FBM Drill, and teaches basic and advanced skills.
- *Exploring Series*: Explores a single Mastercam product—for example Mastercam® for SolidWorks® or Mastercam Swiss Expert, and teaches in-depth skills for working with the product.

The Mastercam tutorial series is in continual development, and we will add modules as we complete them. For information and availability or for further training, please contact your local Mastercam Reseller.

Mastercam Resources

Enhance your Mastercam experience by using the following resources:

- *Mastercam Help*—Access Mastercam Help by selecting **Help, Contents** from Mastercam's menu bar or by pressing **[Alt+H]** on your keyboard. Also, most dialog boxes and ribbon bars feature a Help button that opens Mastercam Help directly to related information. 
- *Mastercam Reseller*—Your local Mastercam Reseller can help with most questions about Mastercam.
- *Technical Support*—CNC Software's Technical Support department (860-875-5006 or support@mastercam.com) is open Monday through Friday from 8:00 a.m. to 5:30 p.m. USA Eastern Standard Time.
- *Mastercam University*—CNC Software sponsors Mastercam University, an affordable online learning platform that gives you 24/7 access to Mastercam training materials. Take advantage of more than 180 videos to master your skills at your own pace and help prepare yourself for Mastercam Certification. For more information on Mastercam University, please contact your Authorized Mastercam Reseller, visit www.mastercamu.com, or email training@mastercam.com.
- *Online communities*—You can search for information or ask questions on the Mastercam Web forum, located at www.emastercam.com. You can also find a wealth of information, including many videos, at www.mastercam.com and www.mastercamedu.com.

For tech tips and the latest Mastercam news, you can join us on Facebook (www.facebook.com/mastercam), follow us on Twitter (www.twitter.com/mastercam), and subscribe to our blog, *Mastercam Xtras* (<http://>

blog.mastercam.com). Visit our YouTube channel to see Mastercam in action (www.youtube.com/user/MastercamCadCam)!



Mastercam Documentation

Mastercam installs the following documents in the \Documentation folder of your Mastercam installation:

- *Mastercam X6 Quick Start*
- *Mastercam X6 Administrator Guide*
- *Mastercam X6 Transition Guide*
- *Mastercam X6 Quick Reference Card*
- *Mastercam X6 File Location Card*
- *Mastercam X6 Post Debugger User's Guide*

Contact Us

For questions about this or other Mastercam documentation, contact the Technical Documentation department by email at techdocs@mastercam.com.

**Attention! Updates may be available.
Go to Mastercam.com/Support for the latest downloads.**



cmc software, inc.

671 Old Post Road
Tolland, CT 06084 USA
www.mastercam.com

Printed in the USA on 100% Post Consumer Waste, FSC Stocks